

PART #NVCC8603TKUS

CLUB CAR ICS ULTRA SEAL ENCLOSURE INSTALLATION INSTRUCTIONS


PARTS NEEDED FOR THIS INSTALLATION:

- Track style enclosure
- 40.75" Aluminum awning rail (2)
- 31.5" Aluminum awning rail (1)


10
SELF TAPPING
SCREWS

INSTALLATION:


1. Remove windshield and any accessories attached to front canopy supports.
2. Remove and retain front and rear canopy hardware.
3. Drill 5/16" holes 1-5/16" and 4-9/16" from one end of 40.75" awning rail. Drill one 1/8" hole 0.5" from other end. Attach using rear canopy support hardware removed in step 2. Using rail as a guide, mark and drill 1/8" hole through front canopy support. Top of awning rail should be flush with bottom edge of rib around front canopy support pocket. Attach rail to front canopy support with pop rivet. Channel should point down and out. Repeat for other side. See Picture 1. Slide enclosure side panels into tracks.
4. Attach 30.5" awning rail to rear of canopy using 2 rivets. Slide rear panel into awning rail. See Picture 2
5. Attach center closeout panel to main rear panel with velcro. Hook rubber extrusion to edge of car body under seat. Attach center closeout to back of seat with adhesive backed velcro. See Picture 2.
6. Zip enclosure sleeves around front canopy supports. See Picture 3.
7. Install side panels of enclosure by sliding them into the aluminum awning rails. See Picture 4. Note: Picture shows bag cover which is not included in this model.
8. Reinstall windshield and other accessories.

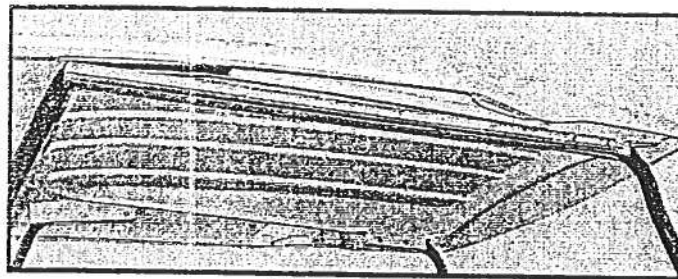


PICTURE 1

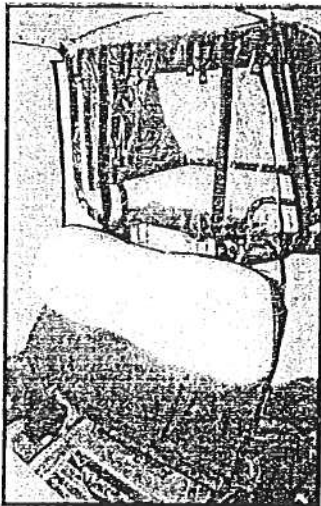

PICTURE 2

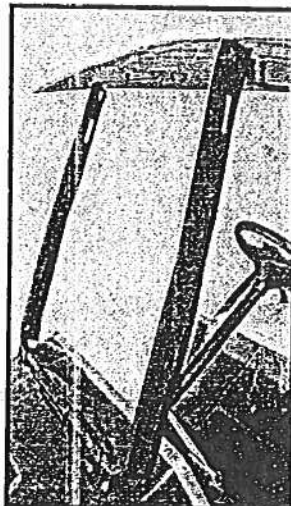

PICTURE 3

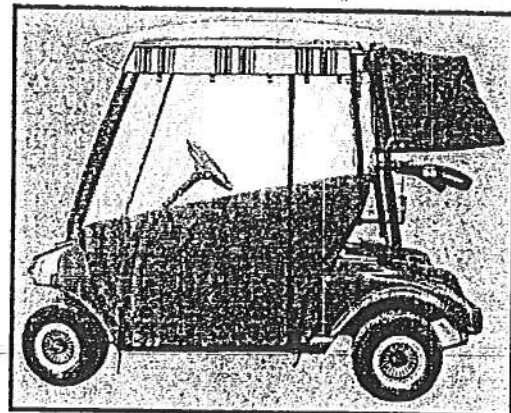

PICTURE 4